

INSTRUCTIONS FOR YOUR HARD WIRED COVERT CAMERA

1. Plug the unit into a 110V wall outlet. If an AC adaptor was provided with your covert camera, you will need to plug the adapter into a 110V wall outlet first and then plug the male 2.5mm jack into the female power jack leading from the unit.
2. Plug the yellow video jack into the yellow RCA jack labeled “video in” on the front or back of your TV, VCR or Monitor. You may need to use an additional RCA cable to do this.
3. If you are using a TV or VCR , you will need to turn to your video channel , which can be found by manually scrolling through your channels or by pressing the input button on your remote control
4. You should now be able to see a picture on your TV or monitor. If you do not , check your connections . Make sure they are all properly connected and that your video jack is leading to “video in” . If you still do not have a picture , you should check to see that your TV, VCR or monitor is on the video input or channel.